



NATURAL BED
COMPANY

Oregon Wooden Bed Assembly Instructions for Threequarter, Double and King size Bed (1.20x1.90, 1.35x1.90 and 1.50x2.00m)



Items included in the bed flat pack are:

- 1 x headboard panel
- 1 x headboard rail (this rail has more holes than the footboard rail)
- 1 x footboard rail
- 2 x side rails
- 1 x centre rail
- 1 x set of sprung beech slats
- 1 x set of plastic end caps (2 per slat)

Fixings:	4x threaded bolts	4x half-moon washers
	4x nuts	1x spanner
	8x wooden dowels	
	3x dome-headed bolts	1x 5mm hexagon key

1. Screw the four threaded bolts into the side rails (See images to follow)
2. Insert the wooden dowels into the headboard and footboard rails, tap these in securely. (See images to follow)



NATURAL BED COMPANY



3. Bring the sections together, then secure using the half-moon washer and the nut with the spanner provided (see images below). **NB:** the images below are of the underside of the bed frame. You can tighten the bolts as shown by lying on the floor or, if there are two of you, you may find it easier to turn the bed upside-down for this procedure (in this case please ensure you have something on the floor to protect the bed frame)



4. Attach the headboard using the dome-headed bolts and the hexagon key –see image (5) below.




5. Lower the centre rail onto the brackets and push down firmly into position – see second image above
6. Attach the end caps to the sprung slats (see image to follow): an end-cap slots on to each end of the slat (ensure the slat curves up in the middle and the 'peg' on the end cap points downwards)



NATURAL BED
COMPANY

7. Attach the slats to the bed frame by slotting the pegs of the end caps into the predrilled holes, which run along the upper side of the inner side rails/centre rail. (See image below)

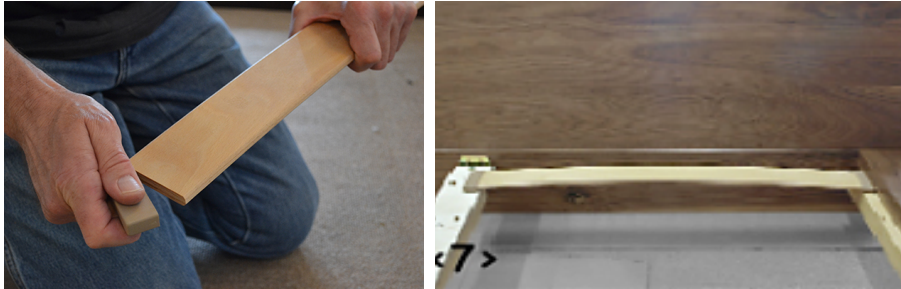

We hope you enjoy your Natural Bed Company Bed!